

## How to update DG-388(AT) FW

1. Short press the power button until the device has a short beep to turn it on.
2. Connect device to PC via GlobalSat cable and then removable disk will appear.
3. Drag the firmware file (.bin) to the removable disk. The firmware name example is as following.

F-GPS-**12**-2405151 -> **DG-388A Firmware**

F-GPS-**13**-2402231 -> **DG-388AT Firmware**

**Note: The DG-388AT firmware could not be used by DG-388A since it has difference in hardware and vice versa.**

4. Disconnect the device from PC and the firmware will be updated automatically. It would do hardware reset after update completed.
5. Connect device to PC via GlobalSat cable and check **DG388.VER** in removable disk to check whether **Application Ver** is matched with the dragged firmware file name. If it's matched, the updating firmware is successful. It's an example below.

Bootloader Ver:F-GPS-11-2401319

Application Ver:F-GPS-13-2402231

MAC address:F74409F8E9C2

GPS Ver:AG3335M\_V1.5.1\_20210816