


Speed/Cadence Combo Sensor Installation Guide


STEP1:

Choose one proper rubber pad and attach it under speed/cadence combo sensor, then install them on your bike.

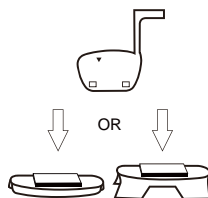


STEP2:


Install spoke magnet (for speed) and pedal magnet (for cadence) as shown in below pictures. (Sensing distance between sensor and magnet should be less than 10mm.)

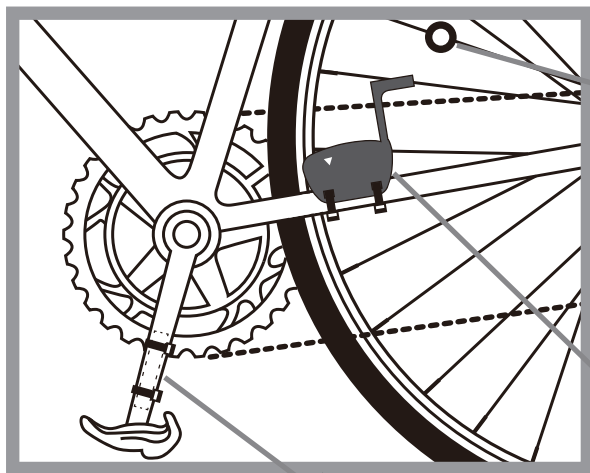


spoke magnet installation

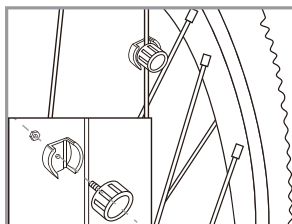


sensing area explanation

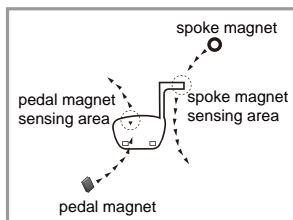

pedal magnet and bands (tied at inner side)

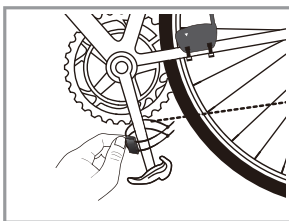

Use screwdriver to adjust the distance between speed sensor arm and spoke magnet.

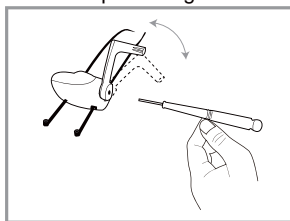

STEP3:

Pedal to trigger sensors and pair with your device. Please see user manual Q2 Pairing Process for details.

